

**ADVERTENCIA** – Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:

1. Siempre desenchufe el aparato inmediatamente después del uso.
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. No trate de alcanzar el aparato después de una caída al agua; desenchúfelo inmediatamente.

**PELIGRO** – Para reducir el riesgo de electrocución:

 
**MANTÉNGALO ALEJADO ANTES DEL USO LEA TODAS LAS INSTRUCCIONES DEL AGUA**

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

**IMPORTANTES MEDIDAS DE SEGURIDAD**

1. Nunca descuide/deje el aparato sin vigilancia mientras está conectado.
2. No toque las barras calentadoras que sostienen los rulos; están muy calientes.
3. Este aparato no debe ser usado por, o cerca de niños o personas con ciertas discapacidades.
4. Use este producto solo para el uso previsto y como se describe en este manual. Solo use accesorios recomendados por Conair.
5. No use este aparato si el cable o enchufe están dañados, si no funciona correctamente, si está dañado, o después de una caída/caída al agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.
6. Mantenga el cable lejos de las superficies calientes.
7. Nunca obstruya los orificios de ventilación, ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.
8. Nunca lo use mientras duerme.
9. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
10. No use este producto en extensores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
11. Coloque el aparato sobre una superficie nivelada.
12. No use un cable alargador/de extensión con este aparato.
13. No enrolle el cable alrededor del aparato.
14. El centro de los rulos se pone muy caliente; sostenga los rulos por los extremos al enrollar el cabello.
15. Antes de enchufar el aparato, lea la información relativa al doble voltaje en la sección “INSTRUCCIONES DE USO”.

## INSTANT HEAT THE ROLLER PALETTE

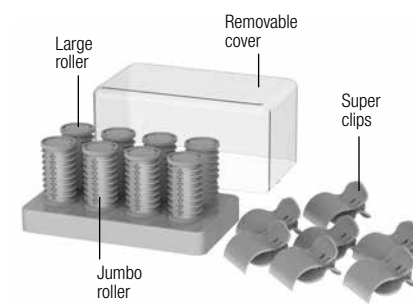

### Features

- 8 multi-size hot rollers: 4 jumbo rollers (1½ inch) and 4 large rollers (1¼ inch)
- 8 super clips
- Starter strips grip hair on rollers
- Hard, removable cover keeps heat at the optimum temperature
- Dual voltage

Replacement rollers for The Roller Palette can be ordered online at [www.conair.com](http://www.conair.com), by using the QR Code below or by calling customer service at 1-800-3-CONAIR.



## OPERATING INSTRUCTIONS

### How to Operate Your Hairsetter


1. Place setter on a firm, flat surface. With the cover closed, plug cord into outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Once plugged in, the rollers will heat up in minutes. The fastest, most efficient heat-up is provided when the cover is closed. Once the rollers are hot, you can begin styling your hair (please refer to **How to Curl and Style Your Hair** for further instruction).
3. When using the setter, your hair should be clean and dry (or slightly damp), never wet.
4. Never leave your setter plugged in and unattended. Always unplug the setter when not in use. Allow the setter to cool down after use. Store unit in safe place.

## GUARDE ESTAS INSTRUCCIONES DE USO DE SUS RULOS CALIENTES

16. No use este aparato con un convertidor de voltaje.
17. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

### Instrucciones de uso de sus rulos calientes

1. Ponga el aparato sobre una superficie plana y segura. Cierre la tapa y enchufe el cable en una toma de corriente polarizada (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente, invertido. Si aun así no entra completamente, comuníquese con un electricista. No intente modificar esta función de seguridad.
2. Una vez enchufado el aparato, los rulos se calentarán en tan solo minutos. Nota: Mantener la tapa cerrada y proporcione un calentamiento más rápido y efectivo. Empezar a marcar el cabello cuando los rulos estén calientes (véase la sección “Cómo marcar el cabello”).
3. El cabello debe estar limpio y seco, ligeramente humedecido; no marque el cabello mojado.
4. Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Siempre desenchufe el aparato después del uso. Permita que el aparato se enfríe antes de guardarlo. Guárdelo en un lugar seguro.

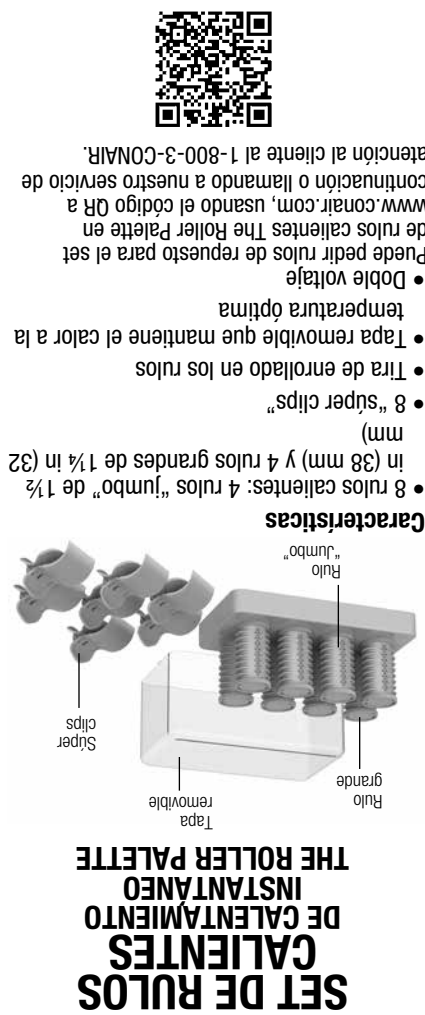

### Características

- 8 rulos calientes: 4 rulos “jumbo” de 1½ in (38 mm) y 4 rulos grandes de 1¼ in (32 mm)
- 8 “super clips”
- Tira de enrollado en los rulos
- Tapa removible que mantiene el calor a la temperatura óptima
- Doble voltaje

Puede pedir rulos de repuesto para el set de rulos calientes The Roller Palette en [www.conair.com](http://www.conair.com), usando el código QR a continuación o llamando a nuestro servicio de atención al cliente al 1-800-3-CONAIR.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER** – To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Do not touch the heating posts that hold the rollers. They are hot.
3. This appliance should not be used by, on, or near children or individuals with certain disabilities.

## SAVE THESE INSTRUCTIONS



1. Divida el cabello en secciones de 2 in (5 cm) para conseguir los mejores rizos. Coloque las puntas en los dientes de la tira de enrollado, y enrolle el rulo hacia el cuero cabelludo. Enrolle firmemente el cabello, y luego sujete el rulo con un clip puesto alrededor del mismo.
2. La textura de los rizos dependerá del diámetro de los rulos, de su temperatura y del tiempo que permanezcan en el cabello. Para conseguir rizos más duraderos, permita que los rulos se calienten por más tiempo y déjelos en el cabello por más tiempo.
3. Para quitar los rulos, sostenga el rulo con una mano y retire el clip con la otra. Deslice suavemente el rulo (NO LO JALE) y permita que el cabello rebote libremente. Permita enfriar por un minuto antes de peinarlo para “fijar” los rizos.



 
## INSTRUCCIONES DE MANTENIMIENTO

Este aparato ha sido diseñado para uso doméstico y requiere poco mantenimiento. Cumple con los más altos estándares de fabricación e ingeniería.

Cuando sea necesario limpiarlo, desenchúfelo y permita que se enfríe. Limpie el aparato con un paño húmedo. De vez en cuando, limpie los rulos usando un paño húmedo y detergente o jabón suaves. En caso de mal funcionamiento, desenchúfe el aparato, permita que se enfríe y devuélvalo a un centro de servicio autorizado para su reparación. Este aparato no contiene ninguna pieza que pueda ser reparada/reemplazada por el usuario.

## ALMACENAMIENTO

Todos sabemos que no se debe mezclar la Permita que el aparato se enfríe. Manipule el cable con cuidado para prolongar su vida útil. No lo tirenee ni lo retuerza, especialmente al nivel del enchufe. Guarde el aparato en un lugar seco y seguro, fuera del alcance de los niños.



## MANTÉNGALO ALEJADO DEL AGUA

**ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.**

 
## THE ROLLER PALETTE

## INSTRUCTION & STYLING GUIDE MODEL HS79

Due to continued product enhancements, product image may differ slightly from actual product purchased.

## SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Todos sabemos que no se debe mezclar la Permita que el aparato se enfríe. Manipule el cable con cuidado para prolongar su vida útil. No lo tirenee ni lo retuerza, especialmente al nivel del enchufe. Guarde el aparato en un lugar seco y seguro, fuera del alcance de los niños.



## MANTÉNGALO ALEJADO DEL AGUA

**ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.**

## GARANTÍA LIMITADA DE TRES AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) este producto sin cargo por un período de 36 meses a partir de la fecha de compra si presenta defectos de fabricación o materiales.

Para obtener servicio técnico bajo esta garantía, devuelva el producto defectuoso al Centro de Servicio indicado en el reverso, junto con su recibo de compra. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 36 meses a partir de la fecha de fabricación.

**CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 36 MESES DE LA PRESENTE GARANTÍA ESCRITA.** Algunos Estados no permiten limitaciones en la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

**CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.** Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

## LIMITED THREE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 36 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 36 months from the date of manufacture.

 
**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 36-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

## ALWAYS UNPLUG SMALL APPLIANCES


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

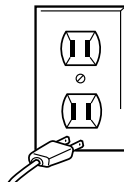

## KEEP AWAY FROM WATER

**WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**
 
## KEEP AWAY FROM WATER

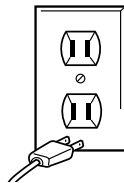


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

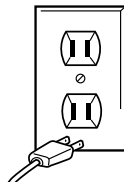


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

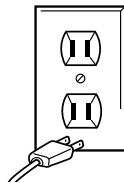


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

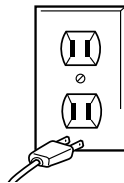


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

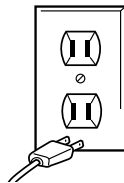


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

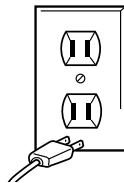


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

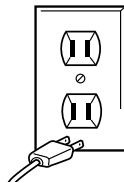


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

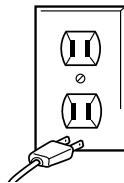


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

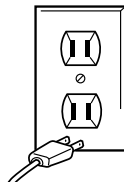


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

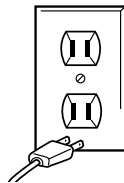


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

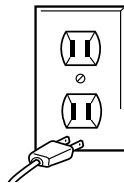


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

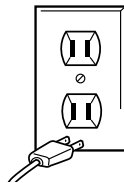


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

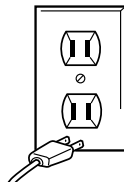


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

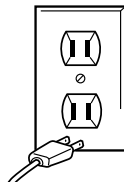


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

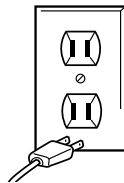


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

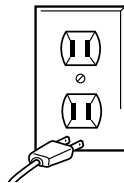


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

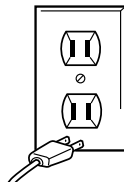


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

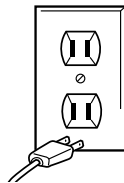


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

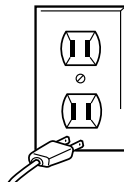


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

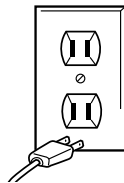


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

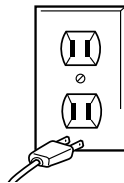


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

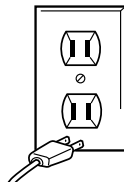


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

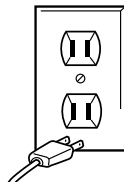


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

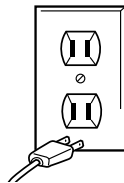


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

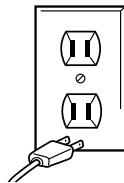


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

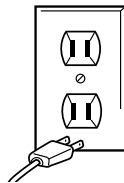


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

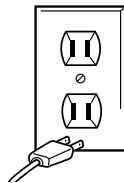


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

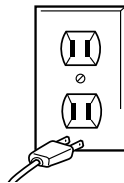


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

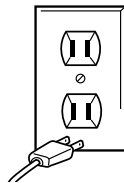


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

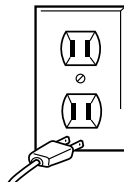


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

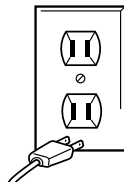


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

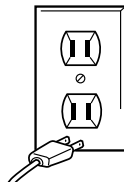


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

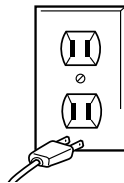


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

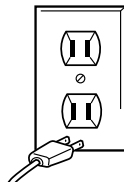


Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

 **WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER

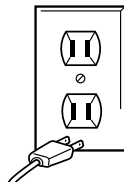

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## KEEP AWAY FROM WATER

**WARNING:  
IF YOU THINK  
THE POWER IS OFF  
WHEN THE SWITCH  
IS OFF,  
YOU'RE WRONG.**

## KEEP AWAY FROM WATER